Bedienungsanleitung

User‘s Guide

FAYTECH 0700 SI/BL
FAYTECH 0700T SI/BL

Deutsch

Support:

+49 211 9954 8956 www.faytech.de

Garantie

Das Gerät wurde nach den modernsten Produktionsverfahren hergestellt und geprüft. Ausgesuchte Komponenten und eine sorgfältige Produktion sorgen für eine einwandfreie Funktion und lange Lebensdauer. Sollte Ihr Gerät dennoch einen Defekt innerhalb der Garantiezeit aufweisen, wenden sie sich bitte direkt an faytech. Die Garantiezeit beträgt 24 Monate, gerechnet von dem Tag des Kaufes, zu nachfolgenden Bedingungen:

- Der Garantieanspruch erlischt bei Eingriffen durch den Käufer oder durch Dritte. Schäden, die durch unsachgemäße Behandlung oder Bedienung, durch falsches Aufstellen oder Aufbewahren, durch unsachgemäßen Anschluss, sowie höhere Gewalt oder sonstige äußere Einflüsse entstehen, fallen nicht unter die Garantieleistung.
- Wir behalten uns vor, bei Reklamationen die defekten Komponenten zu ersetzen oder das Gerät auszutauschen.
- Ausgetauschte Komponenten oder ausgetauschte Geräte gehen in unser Eigentum über.
- Schadensersatzansprüche sind ausgeschlossen, soweit sie nicht auf Vorsatz oder grober Fahrlässigkeit des Herstellers beruhen.

Im Garantiefall nach diesen Bestimmungen wenden sie sich bitte an faytech. Kontaktdaten gibt es am Ende der Bedienungsanleitung oder aktuell unter www.faytech.de.

Nach Ablauf der Garantiezeit können keine Garantieansprüche mehr geltend gemacht werden. Der Nachweis des Garantieanspruches ist durch eine ordnungsgemäße Kaufbestätigung (Quittung oder Rechnung) zu erbringen.

Fehler vermeiden!

Am Ende der Anleitung finden sie eine Übersicht über mögliche Anschluss- oder Bedienungsfehler. Bitte prüfen sie im Bedarfsfall zuerst diese Liste.

Allgemeiner Warnhinweis:

Das Gerät auf keinen Fall mit Schmutz, Öl, Staub oder Wasser in Verbindung kommen lassen. Niemals das Gerät öffnen, nicht fallen lassen. Wenn sie einen verbrannten Geruch wahrnehmen oder das Gerät Geräusche macht trennen sie es sofort vom Stromnetz. Zur Reinigung des Gerätes schalten sie es aus und nutzen sie ein trockenes, weiches Tuch mit leichtem Druck. Nutzen sie das Gerät zu Ihrer eigenen Sicherheit nicht während dem Auto fahren.

Aktualitäts-Hinweis:

faytech produziert seine Displays in China mit deutschem Entwicklungs-Know-how und deutschem Qualitätsmanagement vor Ort. Ihr Feedback fließt direkt mit ein in die Weiterentwicklung unserer Produkte. Die stetige Produktions- und Produktverbesserung ist unser oberstes Ziel. Aus diesem Grund kann es in unseren Produkten bereits Verbesserungen geben, die noch nicht in den jeweiligen Bedienungsanleitungen enthalten sind. Abweichungen Ihres Produktes zu dieser Bedienungsanleitung bedeuten in der Regel Spezifikations- und Produktverbesserungen. Wenden Sie sich bei Fragen bezgl. Abweichungen bitte an unseren Support oder besuchen Sie unsere Internetseite unter www.faytech.de.

© faytech Ltd. 2009

Lieferumfang

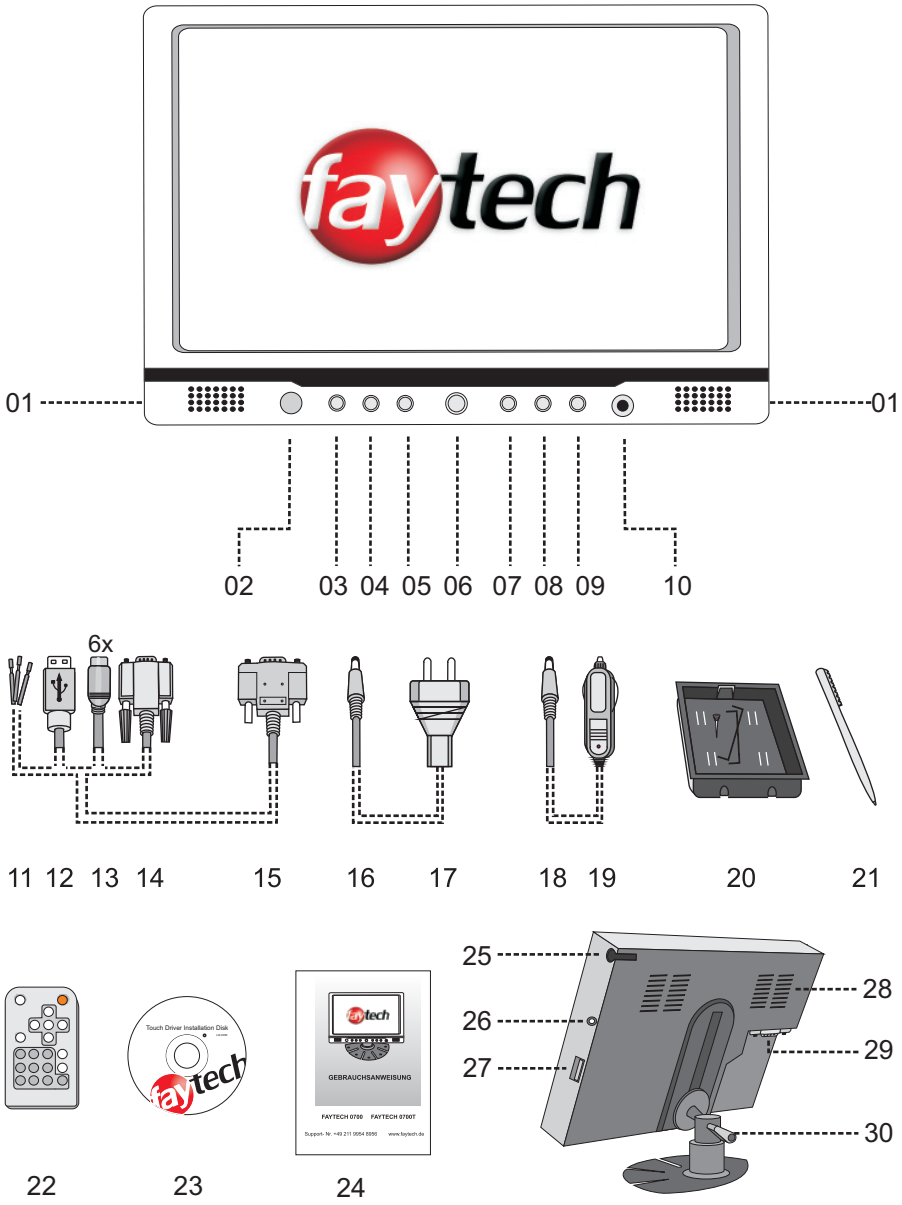

Lieferumfang

01 Lautspecher
02 Infrarotempfänger
03 MODE:schaltet die EingangssignaleVGA, AV1, AV2 durch
04 MUTE: schaltet Ton an/aus
05 VOL-:verringert die Lautstärke / markierte Werte im Menü
06 MENU: öffnet das Menü
07 VOL+:erhöht die Lautstärke /markierte Werte im Menü
08 ☼: schaltet voreingestellte Helligkeitswerte durch
09 PWR: Display Ein/Aus
10 Kopfhörerausgang
11 Zur interner Stromversorgung:+12V, GND, Reversing Light
12 USB-Touch-Panel-Anschlus am PC- USB-Port
13 2 xViedeo- Cinch, 4 x Audio- Cinch zum Video- und Audioanschluss
14 VGA zum Anschluss an der Grafikkarte
15 All- In- One- Kabel zum 29
16 220V Netzteil zum 26
17 220V Netzteil zur Steckdose
18 12V- Adapter zum 26
19 12V-Adapter zur Zigaretten- Anzünde
20 Einbaurahmen
21 Touchstift (nur Displays mit Touchfunktion)
22 Fernbedienung für das Display
23 Treiber-CD (nur Displays mit Touchfunktion)
24 Bedienungsanleitung
25 Halter für 21
26 12 V DC Stromversorgung
27 Verlängerter USB- Port des PCs, siehe Seite 7, Punkt 5.
28 Lautsprecher
29 All- In-One- Kabel Anschlüsse für 15
30 Displayhalterung

© faytech Ltd. 2009

Anschluss des Displays

Jedes Kabel ist beschriftet für den einfachen Anschluss. Um Ihr faytech Display ordnungsmäßig in Betrieb zu nehmen müssen Sie es mit mindestens einer **Signalquelle**, einer **Stromversorgung** und beim Touch-Display optional mit dem **USB-Port** Ihres PCs verbinden.

1. Anschluss **Signalquelle**, Sie haben folgende Möglichkeiten:

- an PC:Verbinden Sie das VGA- Kabel mit dem VGA-Ausgang Ihrer PC-Grafikkarte. Bitte wechseln Sie über MODE auf VGA/RGB, damit Sie ein Bild auf dem Display sehen.

- an DVD-Player/Kamera/Video-Quelle:Verbinden Sie einen oder beide Video-Eingänge (beschriftet mit Video1 bzw. Video2) mit einer entsprechenden Video-Quelle. Bitte schalten Sie unbedingt die Video-Quelle aus bevor Sie die Kabel miteinander verbinden. Wechseln Sie über MODE auf den jeweiligen Kanal-Eingang.

Daneben hat das Display zwei Stereo-Audio-Eingänge, einen für den PC (weißer und roter Cinch-Stecker, beschriftet mit PC AUDIO-L und PC AUDIO-R) und einen für die beiden Video-Eingänge (Ton wird auf beiden Kanälen eingespielt), ebenfalls ein weißer und ein roter Cinch-Stecker, beschriftet mit AUDIO1-L und AUDIO1-R. Der Ton über die Lautsprecher wird nur ausgegeben, wenn auch jeweils ein Bildsignal anliegt. Der Ton wird auch über den Kopfhörerausgang auf der Frontseite des Displays ausgegeben. Werden Kopfhörer angeschlossen wird das Tonsignal nicht über die eingebauten Lautsprecher wiedergegeben.

> ***Tipp:*** *Sie können das Display gleichzeitig über alle drei Signalquellen anschließen. Über MODE auf dem Display oder über den Fernbedienungsknopf MODE schalten sie zwischen den einzelnen Signaleingängen durch.*

2. Anschluss an **Stromquelle**, Sie haben folgende Möglichkeiten:
(nur eine gleichzeitig nutzen!)

Anschluss des Displays

Per Steckverbinder können sie Ihr faytech Display an das mitgelieferte 220V Netzteil oder den 12V-Adapter anschließen, bitte nutzen Sie dafür die an der rechten Seite des Displays angebrachte Buchse die mit DCIN +12V beschriftet ist.

Vorgehen bei Anschluss an eine andere 12V-Quelle über die freien +12V (BATTERY+) und GND-Kabel (GND) im All-In-One-Kabel:

- Verbinden Sie das +12V Kabel an eine Stromquelle mit +12V DC mit min. 0,6 (optimale Stromversorgung) und max. 1,1 A, im PC ist das z.B. das gelbe Kabel vom Netzteil (Siehe unten).

- Verbinden Sie das Ground-Kabel mit einer Erdung, z.B. am PC-Gehäuse.

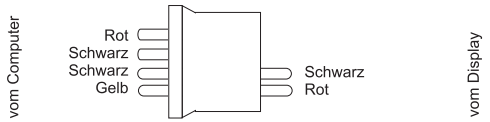

IDE- Festplattenstromversorgung

Bsp.- Anschluss an PC, Festplattenanschluss. Bitte lassen Sie die Kabel von einem Fachmann installieren. Leichtes Bildflimmern entsteht durch Stromschwankungen des Netzteils.

> ***Tipp:*** *Wenn Sie das Display nicht intern über die beiden Stromkabel (rot und schwarz) anschließen, isolieren Sie diese bitte ab. Liegt über eine andere Stromquelle Spannung an kann es sonst zu einem Kurzschluss kommen, der das Display dauerhaft schädigt.*

3. Verbinden Sie das USB- Kabel mit dem USB- Anschluss Ihres PCs (nur Touch) nachdem Sie bei der Software-Installation dazu aufgefordert wurden.

4. Optional Anschluss reversing light (am All-In-One-Kabel): bei anliegen eines +12V-Signals schaltet der Monitor automatisch auf den AV2-Videoeingang.

© faytech Ltd. 2009

Anschluss des Displays

5. An der rechten Seite hat das Display noch einen USB-Anschluss. Dieser Anschluss ist ein verlängerter USB-Port Ihres PCs, wenn Sie das USB-Kabel aus dem All-In-One-Kabel an Ihren PC anschließen.

D.h., über diesen Port verbinden Sie NICHT die Touchfunktion Ihres faytech Displays mit Ihrem PC sondern Sie erhalten über diesen Port einen weiteren PC-USB-Anschluss, z.B. um einen USB-Stick mit Daten anzustecken und über Ihren PC auszulesen.

Bedienung Display

1. Bedientasten am Display:
Siehe **Lieferumfang**

2. Fernbedienung:
Die Fernbedienung funktioniert analog. Zur Inbetriebnahme entfernen Sie zunächst die dünne Plastikscheibe auf der Rückseite damit der Kontakt zwischen Batterie und Fernbedienung hergestellt wird.

3. OSD-Menü-Bedienung:
Die Menü-Bedienung Ihres faytech-Displays ist einfach und logisch. Sie haben drei Bedienknöpfe. MENU, VOL +/ -. Mit MENU rufen Sie das OSD-Menü auf, mit VOL+/ – navigieren Sie durch die jeweiligen Menüpunkte, ins Untermenü gelangen Sie wieder über das Drücken von MENU. Einen Wert ändern Sie, in dem Sie Ihn mit VOL+/- ansteuern und dann MENU zur Änderung des Wertes drücken. Der angesteuerte Menüpunkt erhält nun eine neue Farbmarkierung, über VOL+/ – verändern Sie nun seinen Wert. Drücken Sie erneut MENU

> ***Tipp:*** *Bevor Sie das Menü nutzen stellen Sie am besten zuerst die Deutsche Sprache wie folgt ein: Drücken Sie 3x die Taste MENU, dann mit + auf Position Language, drücken Sie MENU und dann erneut + bis „Deutsch“ angezeigt wird. Speichern Sie mit MENU und navigieren Sie weiter gem. folgender Anleitung.*

werden die Änderungen gespeichert und Sie navigieren mit VOL+/- wieder innerhalb der Registerkarte. Kehren Sie zum Hauptmenüpunkt zurück in dem Sie jeweils den Punkt EXIT im Untermenü an navigieren und MENU drücken.

Im Folgenden wird das VGA-Menü beschrieben. Das AV-Menü hat keine Bildeinstellungen. Anstatt der Funktionen Auto Display Einstellung und Auto Farbeinstellung sowie Farbtemperatur sind nicht vorhanden, stattdessen gibt es die Funktionen Sättigung und Farbton.

- **Farbeinstellungen**

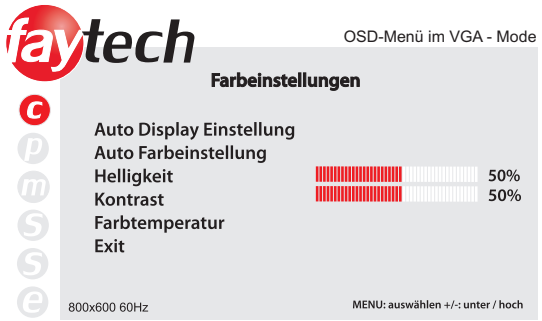

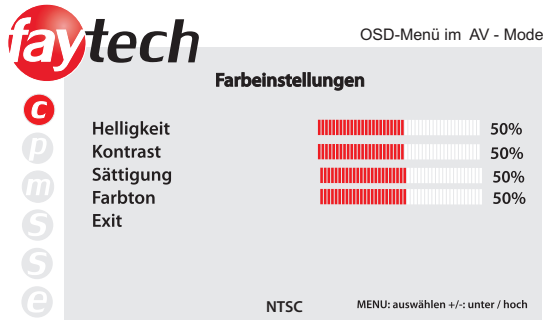

Auto Display Einstellung:
Stellt das Display automatisch optimal auf die aktuelle Auflösung Ihrer Grafikkarte ein. Sind Sie mit der Auto-Einstellung nicht zufrieden optimieren Sie bitte manuell.

© faytech Ltd. 2009

Bedienung Display

Auto Farbeinstellung:
Optimiert automatisch die Farbtemperatur Ihres faytech Displays. Gerne ändern Sie auf Wunsch die Farbwerte des Displays manuell.

Helligkeit:
Erhöht oder senkt den Helligkeitswert Ihres Displays.

Kontrast:
Erhöht oder senkt den Kontrastwert Ihres Displays.

Farbtemperatur:
Hier können Sie aus drei vorgegeben Farbtemperaturräumen wählen oder selber einen Farbtemperaturraum für die Grundfarben Rot, Grün, Blau festlegen

Sättigung: (Nur im AV-Mode)
Erhöht Farbsättigung (stärkere Farben) oder verringert Farbsättigung.

Farbton: (Nur im AV-Mode)
Hier können Sie den Farbton (wärmere Farben oder Kältere Farben) ändern.

Exit:
Sie können hier ins Haupt- oder Submenü zurückkehren.

- **Bildeinstellungen (nicht verfügbar im AV-Mode)**

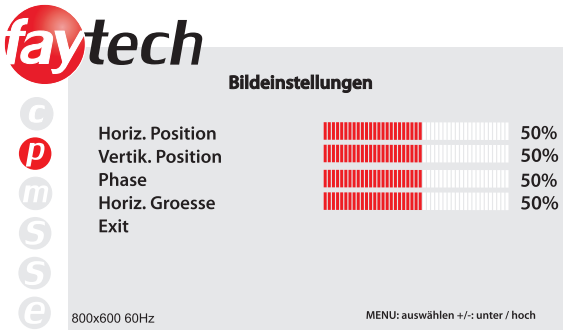

Bedienung Display

Horiz. Position:
Verschieben Sie die Position des Displaybildes nach links (VOL-) oder rechts (VOL+).

Vertik.Position:
Verschieben Sie die Position des Displaybildes nach unten (VOL-) oder oben (VOL+).

Phase:
Lässt Sie die Halbbilddarstellung im Videobereich optimieren.

Horiz. Grösse:
Verkleinern o. vergrößern Sie das Displaybild Ihres faytech Monitors mit VOL-/+.

Exit:
Sie können hier ins Haupt- oder Submenü zurückkehren.

- **Menü Einstellungen**

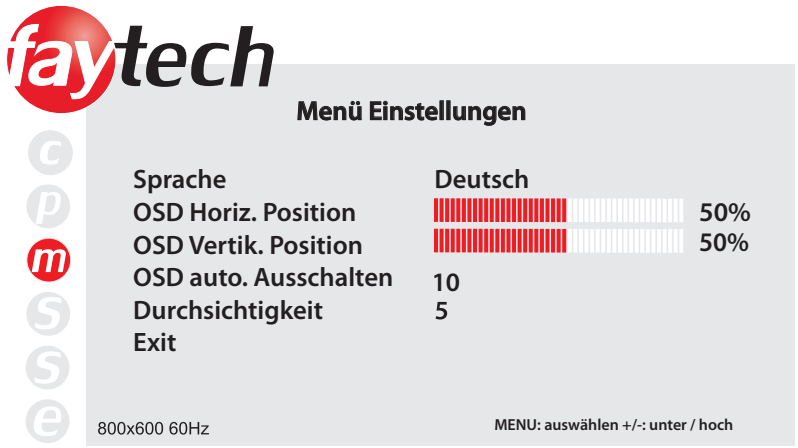

Sprache:
Ändern Sie hier die Sprache des OSD-Menüs.

© faytech Ltd. 2009

Bedienung Display

OSD Horiz. Position:
Verschieben Sie die Position des OSD-Menüs nach links (VOL-) o. rechts (VOL+).

OSD Vertik-Position:
Verschieben Sie die Position des OSD-Menüs nach unten (VOL-) o. nach oben (VOL+).

OSD auto. Ausschalten:
Hier stellen Sie die Zeit ein, nach deren Ablauf das OSD-Menü automatisch beendet wird.

Durchsichtigkeit:
Hier können Sie verschiedene Durchsichtigkeitsstufen für Ihr OSD-Menü auswählen.

Exit:
Sie können hier ins Haupt- oder Submenü zurückkehren.

- **Soundeinstellungen**

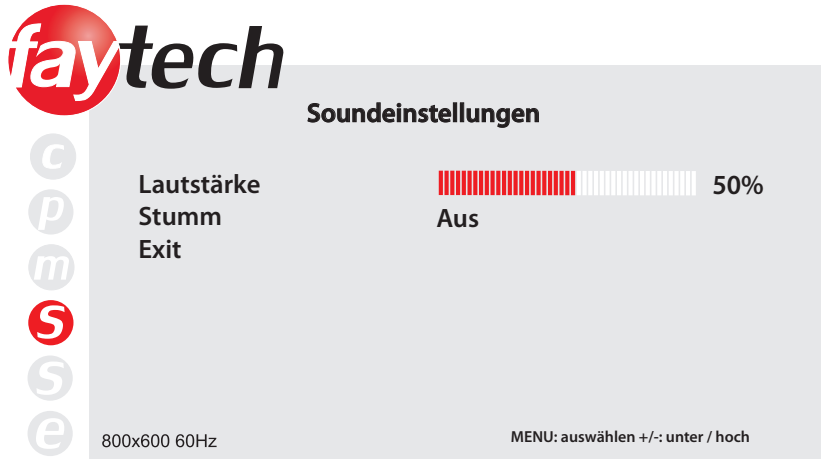

Bedienung Display

Lautstärke:
Verändern Sie die Lautstärke der eingebauten Lautsprecher. Mit - verringern Sie die Lautstärke, mit + erhöhen Sie diese.

Stumm:
Schalten Sie die Lautstärke an/aus.

Exit:
Sie können hier ins Haupt- oder Submenü zurückkehren.

● **Einstellungen**

Werkseinstellungen:
Aktivieren Sie diese Einstellung wird das Display zurück auf die Werkseinstellungen gesetzt, alle Änderungen, die Sie gemacht haben, werden gelöscht.

.

Exit:
Sie können hier ins Haupt- oder Submenü zurückkehren.

© faytech Ltd. 2009

Bedienung Display

● **Exit**
Schalten Sie hier das OSD Menü aus.

Installation Touch-Display unter Windows

(nur bei Touch-Display, zu erkennen am USB-Anschluss, mitgelieferter CD und Touch-Stift)

1. Legen sie die mitgelieferte CD in Ihr CD-Laufwerk ein.

2.Startet das Installationsmenü nicht automatisch, wählen Sie die Datei setup.htm aus, ggfls. müssen Sie dafür zunächst den Unterordner Touch Driver öffnen. Alternativ können Sie über den Explorer auf der CD das passende Unterverzeichnis öffnen und dort direkt die Installations-Datei setup.exe auswählen. Sie sollten nun folgenden Bildschirm sehen:

Wählen Sie für die Windows 2000/XP/Vista/Windows7 den Treiber rechts oben aus. Bestätigen Sie die folgende Sicherheitswarnung mit „Ausführen“. Unter Vista müssen Sie die Benutzerkontensteuerung mit „Fortsetzen“

bestätigen, je nach installierten Sicherheitsprogrammen kann es ggfls. weitere Warnhinweise geben.

Um die Installation mit allen Standardoptionen abzuschließen, können Sie bei allen folgenden Dialogen einfach „Next >“ drücken. Dieses Vorgehen empfehlen wir ausdrücklich! Über „Cancel“ können Sie die Installation jederzeit abbrechen, über „< Back“ können Sie jeweils zum vorherigen Dialog zurück wechseln.

Bitte beachten Sie! Der Installationsvorgang ist auf Englisch, im späteren Programm wird die Sprache aber automatisch auf Ihre gewählte Landessprache eingestellt.

3.**„Welcome to the InstallShield Wizard for TouchKit“:** Drücken sie „Next“ wenn sie das Programm installieren möchten, beenden sie nach Möglichkeit alle anderen Programme.

4.„Setup Type“:

© faytech Ltd. 2009

Installation Touch-Display unter Windows

Aktivieren Sie das Kästchen nur, wenn Sie auch die PS/2-Treiber mit installieren wollen. Ihr Display ist in der Regel ein USB-Touch-Display, entsprechend sollten Sie diese Option NICHT wählen. Der PS/2-Treiber funktioniert reibungslos mit PS/2-Mäusen zusammen, mit anderen Geräten am PS/2-Port können Kompatibilitätsprobleme auftreten.

5.„Setup Type“:

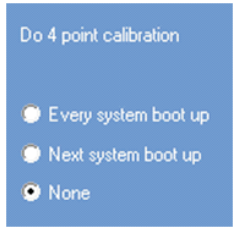

Wir empfehlen die Einstellung „None“. „Every system boot up“ führt eine Kalibrierung bei jedem Systemstart durch. Da die Kalibrierung in der Regel über einen langen Zeitraum konstant bleibt, ist dieses Vorgehen unnötig. Bei der Aktivierung des Kästchens „Next system boot up“ wird die Kalibrierung beim nächsten Systemneustart durchgeführt. Sie können jederzeit eine Kalibrierung im später installierten TouchKit-Programm durchführen, siehe auch **Einstellen der Touch-Software**. Drücken Sie dann „Next“.

6.„TouchKit - InstallShield Wizard“:
Schließen Sie jetzt das USB-Kabel an und drücken Sie „OK“. Falls sich der „Neue Hardware gefunden“ Dialog von Windows öffnet, beenden Sie diesen bitte wieder.

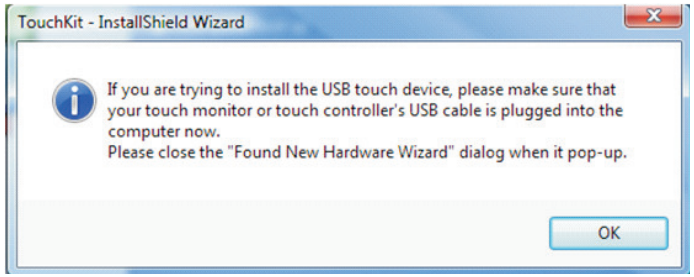

Installation Touch-Display unter Windows

7. „Setup Type“:
Verwenden Sie mehrere Monitore aktivieren Sie dieses Kontrollkästchen, siehe auch Einstellen der Touch-Software.



8.„Choose Destination Location“: Wählen Sie ein Installationsverzeichnis über „Browse“ oder drücken Sie „Next“.
9.„Select Program Folder“: Geben Sie dem Programm einen Namen oder nutzen Sie die Standardeinstellung und drücken Sie „Next“.
10.„Setup Status“: Die Installation wird automatisch mit den ausgewählten Einstellungen durchgeführt. Warten Sie einfach die Fertigstellung ab.
11. Die Installation ist erfolgreich abgeschlossen wenn folgendes Fenster erscheint :

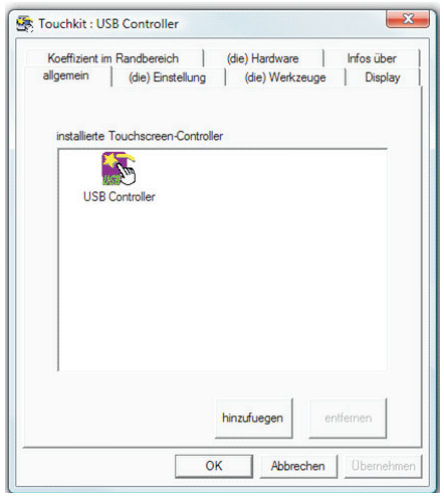

Wird kein USB Controller angezeigt, ziehen Sie bitte einmal das USB-Kabel aus Ihrem PC und verbinden Sie es erneut. Weitere Hilfe gibt es sonst in der Rubrik **Fehler vermeiden/Fehler beheben**.

© faytech Ltd. 2009

Einstellen der faytech Touch - Software

Sie starten das Verwaltungsprogramm über Start, Programme, TouchKit und dann Configure Utility.

Die Touch-Software besitzt sieben Registerflächen die im Folgenden kurz erklärt werden.

1.Allgemein
Das Startfenster „allgemein“ gibt Information darüber, ob ein oder mehrere Touch-Controller gefunden bzw. installiert wurden.

Wird nach der ersten Installation kein Touch-Controller angezeigt (entgegen der Abbildung unter **Installation Touch Display unter Windows**), ziehen Sie bitte einmal den USB-Stecker von Ihrem PC ab und verbinden Sie die Geräte erneut.

2.(die) Einstellung
In den Einstellungen können Sie zunächst unter (der) Signalton die Toneinstellungen des Touch-Panels vornehmen. Über (die) Frequenz und (die) Dauer ändern Sie die Tonhöhe und länge des Signaltons. Die Änderungen werden nach einem klick auf „übernehmen“ wirksam.

Unter **Linearisierung Art** können Sie die Häufigkeit der Linearisierungspunkte unter (die) Werkzeuge, Linearisierung festlegen. Bei einer 25-Punkte Linearisierung ist die Abweichung des Panels vom Druckpunkt geringer als bei einer 9-Punkte Linearisierung. In der Regel sind faytech Displays von Fabrik aus richtig eingestellt und sollten nicht linearisiert werden müssen.

Über die **Doppelklick-Geschwindigkeit** stellen Sie ein, wie schnell Sie hintereinander auf das gleiche Objekt klicken müssen, um einen Doppelklick auszulösen. Je **kuerzer<<**, desto schneller müssen Sie drücken, je **>>laenger**, desto mehr Zeit können Sie zwischen Ihren beiden Klicks vergehen lassen, um einen Doppelklick auszulösen.

Einstellen der faytech Touch - Software

Entsprechendes gilt auch für die **Doppelklick-Position**. Wählen Sie **kleiner<<**, müssen Sie für einen erfolgreichen Doppelklick die gleiche Fläche zwei Mal sehr genau treffen, wählen Sie **>>groesser** wird auch ein Doppelklick ausgeführt, wenn Sie beim zweiten Klick nicht ganz genau die gleiche Fläche treffen wie beim ersten Berühren.

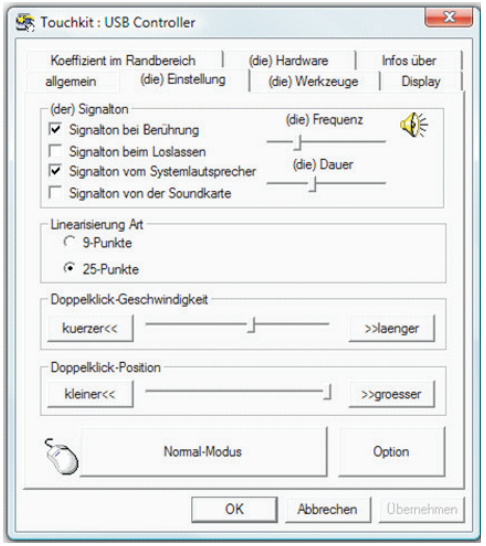

Rechts vom Maussymbol können Sie die unterschiedlichen Maus-Modi einstellen. Die intuitive Touch-Bedienung entspricht dem Normal-Modus.

Normal-Modus: In diesem Modus verhält sich das Touchpanel wie eine gedrückte Maus, wenn Sie es mit Stift oder Finger berühren.

Klick bei Berührung: Es wird nur beim ersten Berühren ein Klick erzeugt, danach folgt der Mauszeiger der Fingerbewegung. Für einen neuen Mausklick muss das Display losgelassen und neu gedrückt werden.

Klick beim Loslassen: Konträr zur Funktion Klick bei Berührung wird ein Klick beim Loslassen des Displays erzeugt.

© faytech Ltd. 2009

Einstellen der faytech Touch - Software

Klick bei Berührung ohne den Mauszeiger zu bewegen: Es wird auf den ersten Druckpunkt ein Klick erzeugt, der Mauszeiger folgt der Finger/Stiftbewegung nicht.

Klick beim Loslassen ohne den Mauszeiger zu bewegen: Der Mauszeiger folgt der Berührung nicht, beim loslassen des Touch-Panels wird an dieser Stelle ein Klick erzeugt.

Rechts von den Maus-Modi gibt es die Schaltfläche **Option**. Folgende Einstellmöglichkeiten gibt es für Ihr faytech Display in diesem Untermenü:

(die) Funktion
Aktiviert die constant Touch-Funktion: reduziert Systemlast durch das Zusammenfassen mehrerer Touch-Panel-Berührungen (Druckabweichungen) zu einem Mausklick.

Aktiviert die automatische right Klick- Funktion: schaltet den automatischen Doppelklick bei längerem Drücken des Displays ein.

Aktiviert die Touch-Funktion: schaltet die Touch-Funktion an/aus
ACHTUNG! Die Touchfunktion funktioniert nach dem Ausschalten nicht mehr!

Aktiviert die Mauszeiger- Stabilisierung: filtert Druckabweichungen bei der Bedienung des Displays heraus und führt so zu einer ruhigeren und saubereren Mauszeigerbewegung.

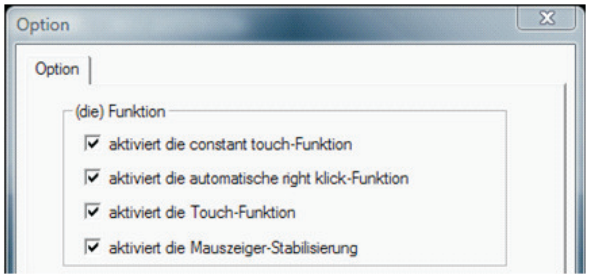

Einstellen der faytech Touch - Software

Mit **Dauer-Touch kleiner<<** bzw. **>>groesser** verändern Sie die Größe der Touchfläche, innerhalb derer die Funktion „rechte Maustaste gedrückt“ aufgerufen wird oder nicht. Je kleiner der Wert ist, desto weniger dürfen Sie Ihren Finger während dem Drücken des Touch-Panels bewegen, um das Drücken der rechten Maustaste zu simulieren.

Bei der nächsten Funktion stellen Sie mit kuerzer<< bzw. >>laenger das Intervall in ms (Millisekunden) ein, nachdem die Funktion „rechte Maustaste gedrückt“ ausgeführt wird, wenn Sie mit dem Finger oder einem Stift auf die Touchfläche drücken.

3.(die) Werkzeuge

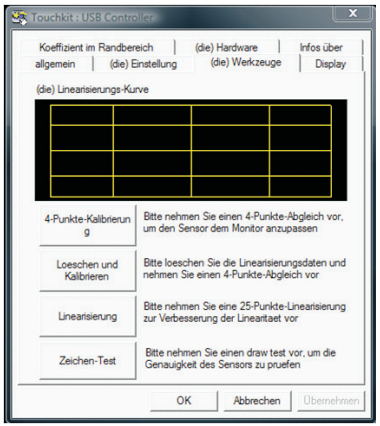

In dieser Registerkarte können Sie Ihr faytech Touch-Panel erneut mit den Funktionen 4-Punkte-Kalibrierung, Loeschen und Kalibrieren, Linearisierung und Zeichen-Test einstellen. In der Regel reicht bei Inbetriebnahme wenn überhaupt nötig- die 4-Punkte-Kalibrierung aus. Mit der Applikation Zeichentest können sie sich mit der Nutzung des Touchscreens vertraut machen und die Funktionalität überprüfen.

Drücken Sie die Funktion 4-Punkte-Kalibrierung wird die Fläche des Touch-Monitors weiß, folgende Informationen werden eingeblendet:

© faytech Ltd. 2009

Einstellen der faytech Touch - Software

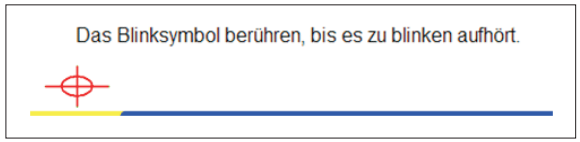

Drücken Sie jeweils auf das rot-grün blinkende Fadenkreuz mit Finger oder Stift, bis es aufhört zu blinken. Haben Sie lange genug auf das Fadenkreuz gedrückt, werden insgesamt drei weitere Fadenkreuze eingeblendet. Unterhalb des Fadenkreuzes läuft ein Fortschrittsbalken mit. Bitte drücken Sie auf das Fadenkreuz bevor der gelbe Balken durchgelaufen ist, sonst wird die Kalibrierung abgebrochen.

Die Funktionen **Loeschen und Kalibrieren** und **Linearisierung** arbeiten nach dem gleichen Prinzip. Führen Sie diese beiden Funktionen bitte nur durch, wenn Sie trotz 4-Punkte-Kalibrierung und Optimierung im Register **„Koeffizient im Randbereich“** kein zufriedenstellendes Ergebnis hinsichtlich der Genauigkeit Ihres faytech Touch-Displays erzielen. Mit der 25-Punkte-Linearisierung stellen Sie Ihren Touch-Monitor mit der größtmöglichen Genauigkeit ein. Unter Einstellung, Linearisierung Art können Sie im Programm festlegen, ob Sie eine 25-Punkte-Linearisierung oder eine 9-Punkte-Linearisierung an dieser Stelle durchführen möchten.

Mit Hilfe der Applikation **Zeichen-Test** können Sie sich mit der Nutzung des Touchscreens vertraut machen. Drücken Sie auf das linke, blaue Kästchen Löschen Sie Ihre Touchscreen-Eingaben, mit einem Klick auf das rechte blaue Kästchen beenden Sie das Zeichenprogramm.

Einstellen der faytech Touch - Software

4. Display Multi-Monitor-Einstellungen

Die Registerkarte Display ist für Sie wichtig, wenn Sie mehrere Displays gleichzeitig nutzen. Sie können bis zu vier faytech Touch-Displays gleichzeitig verwenden, zum Beispiel aber auch ein (Nichttouch-) Display und ein Touchdisplay nutzen, wie es im folgenden Bild zu sehen ist. Im Beispiel ist der Touch-Monitor das Display „1“, das zweite Display „2“ ist ein normaler Monitor. Beide haben die gleiche Auflösung, das Touchdisplay ist der primäre Monitor.

Ist die **Mehrfach-Monitor-Funktion** NICHT aktiviert, wird stets der primäre Monitor als Touch-Screen-Monitor gesetzt. Aktivieren Sie die Funktion, können Sie einen der angeschlossenen Monitore als Touch-Screen-Monitor auswählen. Drücken Sie dafür per Doppelklick auf den gewünschten Monitor und bejahen Sie die Frage im Pop-Up-Fenster:

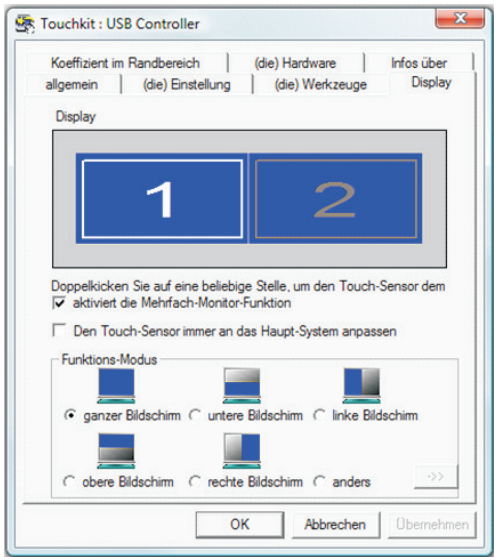

Nach Bestätigung werden Touch-Panel-Berührungen auf dem gewählten Monitor als Mausklicke simuliert.

© faytech Ltd. 2009

Einstellen der faytech Touch - Software

Ist die Funktion „Den Touch-Sensor immer an das Haupt-System anpassen“ aktiviert, schaltet das Programm die Touch-Funktion automatisch auf den primären Monitor, wenn nur ein Monitor angeschlossen wird.

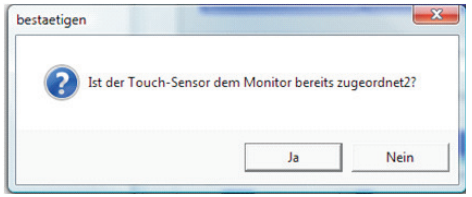

Über die **Funktions-Modus** Einstellungen können Sie die Größe der Touch-Fläche auf Ihrem faytech Touch-Monitor einstellen bzw. begrenzen. Wählen Sie z.B. die Funktion „rechter Bildschirm“ aus funktioniert nach einer neuen Kalibrierung nur noch die rechte Seite als Touchfläche. Unter „anders“ und dann auf ->> können Sie weitere Modi einstellen oder individuell eine Touch-Fläche definieren.

5.Koeffizient im Randbereich Feinjustierung der Touchfläche

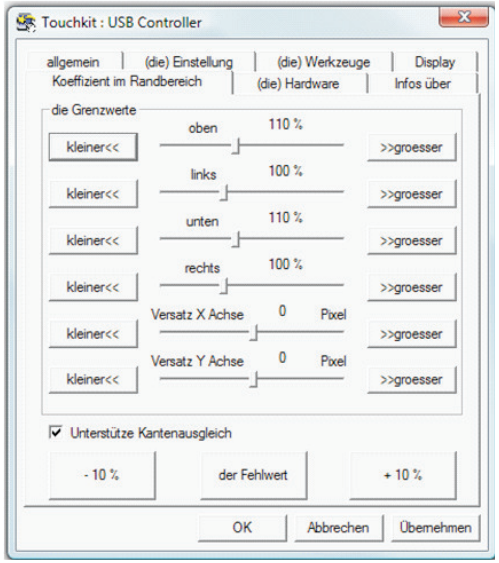

Einstellen der faytech Touch - Software

Über dieses Register können Sie Ihre Touch-Fläche feinjustieren. Dies ist sehr nützlich, wenn Sie z.B. Probleme haben, den Rand des Touch-Displays sauber zu treffe.

Im Beispielbild sehen Sie, dass die Grenzwerte in der oberen Bildschirmhälfte und der unteren Bildschirmhälfte korrigiert wurden.

Wenn Sie z.B. im oberen, rechten Bereich Probleme haben, einen Punkt genau zu treffen, vergrößern Sie die oberen und rechten Grenzwerte (>>groesser). Übernehmen Sie die Änderung und testen Sie am besten unter (die) Werkzeuge, Zeichen-Test, ob Sie den Punkt nun besser treffen. Genau so können Sie die X-Achse und die Y-Achse über die beiden Versatz-Optionen verschieben und so den Touch-Punkt/den Mauszeiger verschieben.

Die Funktion „Unterstütze Kantenausgleich“ optimiert softwaregesteuert die Touch-Erkennung in den Eckbereichen Ihres faytech Touch-Panels. Sie sollten diese Funktion aktivieren.

6.Registerkarten (die) Hardware, Infos über

Die beiden letzten Registerkarten stellen lediglich informative Inhalte zur Verfügung, Einstellmöglichkeiten gibt es in diesen Registern keine.

Registerkarte **(die) Hardware** informiert über die Bauart des faytech Touchdisplays und die verwendete Firmware.

Die Registerkarte **Infos über** zeigt die Treiberversion und Informationen zum Programmierer der Software an.

7.Touchkit-Programm in der Taskleiste

Über das TouchKit-Symbol in der Taskleiste können Sie mit dem rechten Mausklick folgende Schnell-Änderungen an den Touch-Kit-Einstellungen vornehmen. Die einzelnen Funktionen sind bereits in diesem Kapitel

© faytech Ltd. 2009

Einstellen der faytech Touch - Software

beschrieben worden.

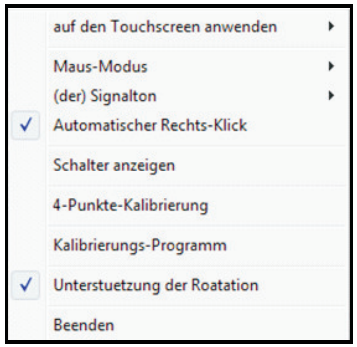

Zusätzlich können Sie mit der Funktion „Schalter anzeigen“ eine Maus in der rechten, unteren Bildschirmhälfte einblenden. Die rote Markierung zeigt, welcher Mausknopf beim Berühren des Touch-Displays simuliert wird.

Mit einem Klick auf den linken oder rechten Mauszeiger der Animation verändern Sie entsprechend das Klick-Verhalten des Touch-Panels bei Berührung. Blenden Sie diese Funktion ein, wenn Sie einfach zwischen rechtem und linken Mauszeiger hin- und herwechseln möchten.

Fehler vermeiden / Fehler beheben

Durch die vielen Anschluss- und Einsatzmöglichkeiten des Displays besteht die Gefahr, dass es bei der Inbetriebnahme zu Problemen kommt. Im Folgenden stellen wir die häufigsten Fehlerursachen und Fehlerlösungen dar:

Beim Anschluss:

- teilweise sind die Kabel schwer aufeinander zu stecken. Gehen Sie bitte trotzdem vorsichtig vor und achten Sie darauf, dass die Pfeile aufeinander zeigen. Bildfehler oder Nichtfunktionen werden häufig durch Steckfehler ausgelöst. Stellen Sie einen Fehler fest trennen Sie das Display vom Strom und überprüfen Sie die einzelnen Stifte in den Kabeln auf Unversehrtheit. Gerne tauschen wir Ihnen ein defektes Kabel aus, schicken Sie deswegen nicht das Display zurück.

Fehler vermeiden / Fehler beheben

- vermeiden Sie unbedingt Kurzschlüsse! Achten Sie penibel darauf, dass nach Anschluss der Stromquelle keine Kabel frei rumliegen. Wechseln Sie Steckverbindungen nur, wenn kein Strom anliegt.

- versorgen Sie das Display nur mit 12 V DC. Eine höhere oder geringere Voltzahl beschädigt das Display unwiderruflich!

Bei der Inbetriebnahme:
Bitte beachten Sie, dass Sie zunächst den Power-Knopf drücken und dann ggfls. noch über MODE auf das richtige Eingangssignal VGA/AV1/AV2 wechseln müssen, um ein Signal zu erhalten. Ist zunächst keine Signalquelle angeschlossen, meldet das Display „kein Signal“ und geht nach einer kurzen Zeit automatisch aus.

1. Display bleibt schwarz:

- Anschlussfehler: Bitte überprüfen Sie zunächst noch mal, ob alle Signalquellen richtig angeschlossen sind.

- Auflösungs/Ansteuerungsfehler: Bei der Ansteuerung der Displays gibt es die häufigsten Probleme. Das Display unterstützt die unter den Technischen Daten angegebenen Bildformate. Gerade beim gleichzeitigen Betrieb von zwei Displays an einem PC oder dem Anschluss von einem zusätzlichen Display an ein Notebook entstehen häufig Komplikationen, die in der Hard- und Software des PCs begründet sind. Schließen Sie das Display am besten immer zunächst einzeln bei einer Auflösung von 800x600 bei 60Hz an.Testen Sie von dieser Auflösung ausgehend die für Sie beste. Konfiguration.

Beachten Sie, dass erweiterte Desktops zunächst schwarz sind Entsprechend ist auch das Display zunächst schwarz, wenn Sie es als erweiterten Desktop konfigurieren.

Tipp: *Nutzen Sie das Display am besten bei einer Auflösung von 800x600 oder 1024x768 bei 60Hz. Ist das Display als*

© faytech Ltd. 2009

Fehler vermeiden / Fehler beheben

Zweitdisplay bei einem PC gedacht, der daneben ein Display mit einer deutlich höheren Auflösung angeschlossen hat, konfigurieren Sie Auflösungs-Profile. Bei ATI-Grafikkarten können Sie Profile im erweiterten Catalyst Control Center unter Profile einrichten. Aktivieren Sie einen HotKey, damit Sie zwischen den einzelnen Profilen (einmal Touch-Display, einmal hochauflösendes Display) hin- und herwechseln können. Auch über Powerstrip können Sie solche Profile konfigurieren.

Netzteil-Fehler:Reagiert das Display auf keine Eingaben, kann es einen Fehler bei der Stromversorgung geben. Bitte überprüfen Sie zunächst ihre Anschlüsse und eine andere Stromquelle, bevor sie das Display einschicken. Gerne tauschen wir ihnen unkompliziert ein defektes Netzteil aus.

2. Streifen/Fehler im Bild

- Pixelfehler:Die Displays werden ausführlich getestet und ohne Pixelfehler ausgeliefert. Hat ihr Display trotzdem einen Pixelfehler wenden Sie sich bitte an unseren Support.

- Schrift ist schwer zu lesen, Bild sieht unscharf aus: Das Display-Bild ist bei einer Auflösung von 800x600 bei 60Hz klar und deutlich zu lesen. Bei höheren Auflösungen interpoliert das Display. Dies führt zu Ungenauigkeiten in der Darstellung und Pixelschwingungen. Nutzen sie das Display entsprechend nach Möglichkeit nicht bei höheren Auflösungen als 1024x768 bei 60Hz.

- Streifen/Fehler im Bild:Beim Anschluss des Displays über z.B. ein PC-Netzteil entstehen häufig leichte Flackereffekte. Dies liegt an den Störströmungen, die das Netzteil mit aussendet. Bitte prüfen Sie alternative Stromquellen oder achten Sie auf Störquellen, um das Bild zu verbessern.

Technische Daten

Änderungen im Sinne des technischen Fortschritts vorbehalten

Display mit u. ohne Touchfunktion

Displaygehäuse (cm):	18x12,5x2,5
Bildschirmdiagonale (inch/cm):	7/17,78cm
Display (cm):	15,5x9,1
Einbaurahmen (cm):	20,2x14,6x3,0
Befestigung:	Standfuß(Befestigung über Schiene auf Rückseite)
Brutto-Gewicht (inkl. Verpackung, kg):	1,3
Netto-Display-Gewicht (kg):	0,6
Seitenverhältnis:	16:9
Physikalische Auflösung:	800x480
Maximal darstellbare Auflösung:	1920x1200
Anzahl darstellbare Farben:	262.144
Helligkeit (cd/m2):	300
Kontrast:	500:1
Typische Reaktionszeit Tr, Tf (ms):	10,15
Betrachtungswinkel horizontal; vertikal (°):	140;120
Betriebsspannung (V):	11,5-13
Stromverbrauch (W):	12
Stand-By-Verbrauch (W):	1
Betriebstemperatur (°C):	-20 bis +50
Anschlüsse, Bild:	2x Video, 1x VGA
Anschlüsse, Audio:	1x Audio-In, 1x Kopfhöhrer out
Stromversorgung (im Lieferumfang):	230V, 12V
Weitere Eigenschaften:	OSD-Menü, Lautsprecher, Touchstift

Display mit Touchfunktion

Touch-Panel:	4-wire resistive
Touch-Anschluss:	USB
Touch-Panel-Treiber:	Windows, Linux, Apple
Lebensdauer Touch-Panel (Berührungen):	> 10 000 000
Reaktionszeit Touch-Panel (ms):	< 10
Oberflächenhärtegrad:	3H
Druckstärke (g):	20 ~ 150

Unterstützte VGA - Auflösungen

640x480, 60Hz	800x480, 60Hz	800x600, 60Hz	1024x768, 60Hz	1280x720, 60Hz
1280x768, 60Hz	1360x768, 60Hz	1440x900, 60Hz	1600x1200, 60Hz	1920x1080, 60Hz
1920x1200, 60Hz	720x576, 50Hz	1280x720, 50Hz	1920x1080, 50Hz	

Unter www.faytech.de können sie sich gerne unsere PowerStrip Timing-Parameter (Programm-download unter http://entechtaiwan.net/util/ps.shtm) herunter laden.

© faytech Ltd. 2009

English

Support:

+1 720 251 4158 www.faytech.cn

Warranty:

faytech touch displays are produced following the most modern production and test processes. Carefully selected components and accurate production ensure reliable operation and long life. faytech warrants to the original purchaser that each faytech touch display delivered shall be free from defects in material or workmanship at time of shipment, and that each such module delivered will meet the published specifications for a period of 24 months as measured from the date of original shipment. faytech's obligation under the Warranty contained herein is limited to the repair or replacement of any faytech touch monitor that does not meet the specifications, provided that said product is returned to faytech, transportation charges pre-paid, and provided that upon faytech's examination, the product, when tested within the specified ratings and in accordance with good engineering practice, does not meet the specifications as defined. THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING WITHOUT LIMITATION THE WARRANTY OF MERCHANTABILITY AND THE WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE.

All claims under warranty must be made promptly after occurrence of circumstances giving rise thereto and must be received within the applicable warranty period by faytech or its authorized representative. Such claims should include the Product type and serial numbers and a full description of the circumstances giving rise to the claim. Before any Products are returned for repair and/or adjustment, written authorization from faytech or its authorized representative for the return and instructions as to how and where these Products should be shipped must be obtained. Any product returned to faytech for examination shall be sent prepaid via the means of transportation indicated as acceptable by faytech. faytech reserves the right to reject any warranty claim not promptly reported and any warranty claim on any item that has been altered or has been shipped by non-acceptable means of transportation. When any Product is returned for examination and inspection, or for any other reason, Customer will be responsible for all damage resulting from improper packing or handling and for loss in transit, notwithstanding any defect or nonconformity in the Product. In all cases faytech has sole responsibility for determining the cause and nature of failure, and faytech's determination with regard thereto shall be final. If it is found that faytech's Product has been returned without cause and is still serviceable, Customer will be notified and the Product returned at Customer's expense. In addition, a charge for testing and examination may, in faytech's sole discretion, be made on Products so returned.

SELLER'S LIABILITY FOR DAMAGES SHALL NOT EXCEED THE PAYMENT, IF ANY, RECEIVED BY SELLER FOR THE UNIT OF PRODUCT OR SERVICE FURNISHED OR TO BE FURNISHED AS THE CASE MAY BE WHICH IS THE SUBJECT OF CLAIM OR DISPUTE. IN NO EVENT SHALL SELLER BE LIABLE FOR INCIDENTAL, CONSEQUENTIAL OR SPECIAL DAMAGES. LIABILITY TO THIRD PARTIES, FOR BODILY INJURY INCLUDING DEATH, RESULTING FROM SELLER'S PERFORMANCE SHALL BE DETERMINED IN ACCORDANCE WITH APPLICABLE LAW AND THE TOTAL LIABILITY LIMITATION STATED ABOVE SHALL NOT BE CONSTRUED AS A LIMITATION ON SELLER FOR DAMAGES FOR ANY SUCH BODILY INJURY, INCLUDING DEATH.

WARRANTY FOR ITEMS REPLACED UNDER WARRANTY

Whenever a failed module is replaced under Warranty, the greater of the balance of the original Warranty Period or 90 days will constitute the remaining warranty period. The replaced unit does not carry a new Warranty.

LIFE SUPPORT POLICY "WARNING: DO NOT USE IN LIFE SUPPORT"

SELLER'S PRODUCTS ARE NOT AUTHORIZED FOR USE AS CRITICAL COMPONENTS IN LIFE SUPPORT DEVICES OR SYSTEMS WITHOUT THE EXPRESS PRIOR WRITTEN APPROVAL OF THE PRESIDENT OF FAYTECH. As used herein, “Life Support Devices or Systems” are devices which

support or sustain life and whose failure to perform when properly used in accordance with instructions for use provided in the labeling can be reasonably expected to result in a significant injury to the user. A “Critical Component” is any component in a life support device or system whose failure to perform can be reasonably expected to cause the failure of the life support device or system or to affect its safety or effectiveness.

If your device does have a defect within the warranty period, please contact faytech directly. The warranty period is 24 months from the date of purchase under the following conditions:

- All warranties are void if the unit has been opened or disassembled without faytech's prior approval.
- Damage caused by improper handling or operation, by incorrect installation or storage, through improper connections, as well as due to force majeure or other external influences are not covered by the warranty.
- For warranty claim, we reserve the right to replace the defective components or to exchange the device.
- Exchanged components or devices become the property of faytech.
- Claims for damages are excluded in so far as they are not based on intent or gross negligence of the manufacturer.
- After expiration of the warranty period, warranty claims can no longer be pursued.
- Any warranty claim must be accompanied by proof of purchase (receipt or invoice).

General warning:

Avoid all contact with dirt, oil, dust or water. Never open the unit. Do not drop the unit. If you notice a burning smell or hear the device making unusual sounds, please disconnect it immediately from the power source. To clean the unit, please turn off the device first, then clean it very gently with a dry, soft cloth. For your own safety, please do not use the device during driving.

Trouble-shooting:

Please follow all instructions carefully. At the end of this guide there is an overview of possible connection or other types of operation errors.

Ongoing changes:

faytech produces its displays in China with German know-how and quality management. Your feedback is the most valuable information for the improvement of our products. Continuous production and product improvement is our primary goal. For this reason, there may be improvements in our products which are not yet included in this user's guide. Differences between your product and this user's guide are generally related to specification changes and product improvements. If you have any questions or suggestions, please contact our support team or visit our website at www.faytech.cn.

© faytech Ltd. 2009

Components:

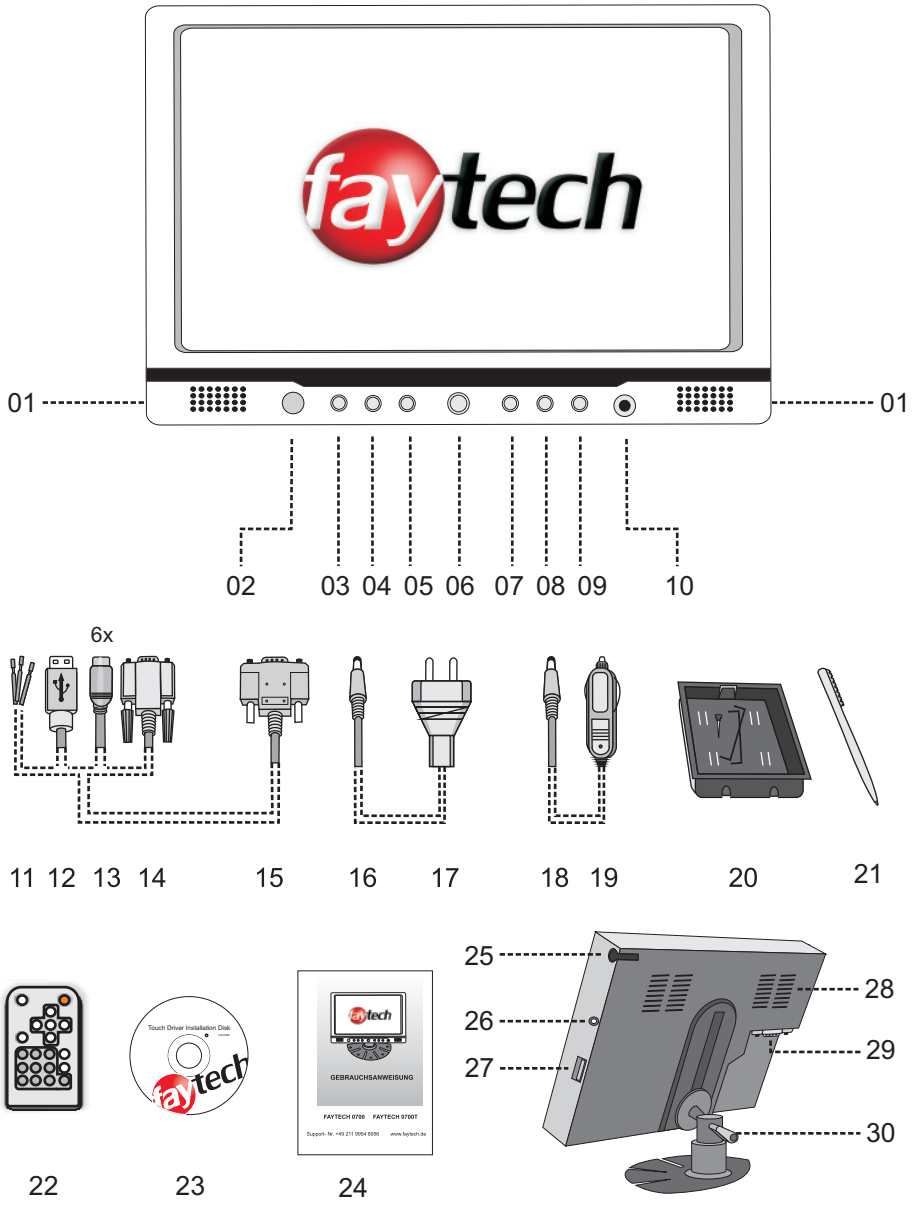

Components:

01 Speakers
02 Infrared receiver
03 MODE: switch from VGA to AV1 to AV2. Make sure the input source is correct or you will not see any image on your screen
04 MUTE: turn speakers on or off
05 VOL-: reduce the volume –or- navigate in the OSD menu –or- change the highlighted values in the menu
06 MENU: open the OSD menu –or- confirm selection in the OSD menu
07 VOL+: increase the volume –or- navigate in the OSD menu –or- change the highlighted values in the menu
08 ☼ BRIGHTNESS: change the brightness of the display
09 PWR: turn the display on or off
10 Earphone out
11 For the internal power supply of the PC: +12V, GND, Reversing light
12 USB connector for the touch function
13 2x Video connectors, 4x Audio connectors
14 VGA connector to PC
15 All-In-One cable with VGA, USB, power, video and audio connections. Connect to input (29)
16 120 or 220VAC adapter connects to input (26)
17 120 or 220VAC power plug
18 12V adaptor connects to input (26)
19 12V adaptor to cigarette lighter
20 Mounting case
21 Touch pen (only for display with touch function)
22 Remote control for the display
23 Driver CD (only for display with touch function)
24 User's guide
25 Holder for touch pen
26 12V DC power input
27 Extended USB port to PCs; see section 5 of Display Connections
28 Speakers
29 All-In-One cable (15) input
30 Display stand

© faytech Ltd. 2009

Display Connection

Each cable is labeled for easy connection. To operate your faytech display properly, there must be at least one signal source and a power supply connected. If you have the optional touch screen and you want to use it, you also must have the USB port connected to your PC.

1. To connect the **signal source**, you have the following options:

- On a PC: Connect the VGA cable from the faytech monitor to the VGA output of your PC graphics card. Please select MODE VGA / RGB, so you have an image on the display.
- On a PC: If you have only one DVI output on your PC, please purchase a DVI to VGA adapter and connect the display via VGA to your PC.
- To DVD-Player/camera/Video source: Connect one or two video inputs (labeled Video1 or Video2) to a corresponding video source. Please be sure to switch off the video source before you connect the cables. Switch MODE to the respective channel input (AV1 or AV2).

In addition, the display has two stereo audio inputs, one for the PC (red and white RCA connectors, labeled with PC AUDIO-L and PC AUDIO-R) and one for the two video inputs (sound is carried on both channels), also a white and red RCA connector, labeled with AUDIO1-L and AUDIO1-R . Audio comes through the speakers only if there is an image signal. Audio is also available from the earphone output on the front side of the display. If earphones are connected, the built-in speakers will not be active.

Tip: *You can use the display simultaneously with all three video signal sources. Use the MODE button on the display or the MODE button on the remote control to switch between the various signal inputs.*

2.Connect power using only one of these options (do not try to connect more than one power source at the same time):

Display Connection

You can connect the faytech display with the included 120V/220V plug or the 12V power adapter. Insert one of these power sources into the input (26) which is labeled +12 VDCIN (found on the right side of the display).

Another alternative is to connect another 12V source to the pigtails on the All-In-One cable (11). Make sure to connect the +12 V (BATTERY +) lead to a positive 12V source and connect the Ground lead (GND) to a ground on the same power source:

- Connect the +12 V cable to a power supply that delivers +12 V DC and 1.1 A. In most PCs this will be the yellow cable from the power supply (see fig. below)

- Connect the ground cable to a stable ground such as the chassis of the PC.

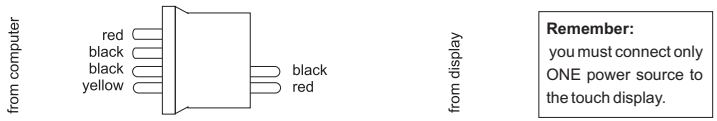

IDE harddisk power supply

If you are not absolutely sure how to do this, please hire a professional to make this power connection for you. Flickering images on the display are indications that the power connection has not been made properly.

> ***Tip:*** If you do not use the two power cables of the All-In-One cable (red and black) please cap them off or otherwise isolate them so they will not create a short which could permanently damage the display.

3.Connect the USB cable (on one end of the All-In-One cable) to the USB port on your PC (only for the display with touch function) but only after you are requested to do so while you are installing the touch software.

4. The reversing light connection on the All-In-One cable is optional. It's mainly meant to be used for an automobile application, but it's possible to use it in other ways. If you connect this lead to the +12V side of the backup lights and also connect a rear mounted video camera to AV2, the monitor will

© faytech Ltd. 2009

Display Connection

automatically switch its source to AV2 when you put the car in reverse and will automatically return to VGA when the car is taken out of reverse.

5. On the right side of the display is another USB port. If you plug the USB connector from the All-In-One cable into a USB port on your PC but you do not load the touch drivers, then this port is an extension of the USB port on your PC. You can connect a USBstick or any other USB device to your PC by using this USB extension port.

Display Operation

1.For a description of the buttons on the display see the previous section titled “Components”.

2. The remote control: The remote control functions are similar to the buttons on the display. Before using the remote for the first time, please remove the thin plastic on the back side so that the battery makes contact and the remote control has power.

3.OSD-Menu-Operation in VGA mode: The Menu operation of the faytech display is simple and logical. You have three control buttons. MENU, VOL +/ -. Pressing MENU brings up the OSD menu; with VOL +/- you can navigate through the main menu. By pressing MENU again you switch to the submenu. Use VOL+/- to select the appropriate item in the submenu. The selected item will be marked in red. To change the value of an item please use VOL +/ –. Press MENU again to save the changes and you can then navigate again with the Vol+ and VOL- buttons. To return to the main menu, select EXIT and press MENU.

4. OSD-Menu-Operation in AV mode: The Menu for either AV signal has almost the same tabs and functions as when in VGA mode. The “Picture Settings” tab is not available. The “Auto Calibration”, “Auto Color” and “Color Temperature” functions under “Color Settings” are replaced with “Saturation” and “Hue”.

•**Color settings:**

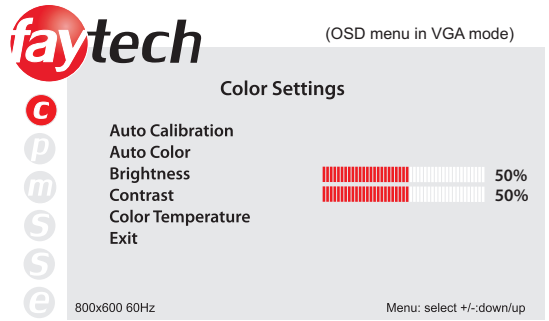

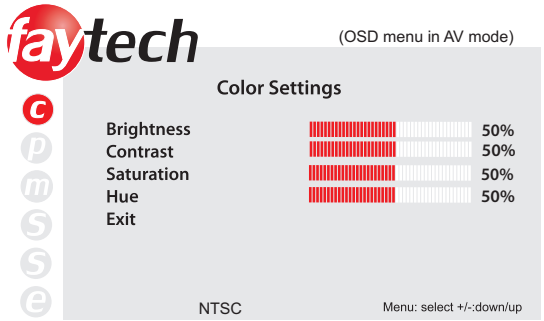

Auto calibration:
The display is automatically adjusted to the current resolution of your graphics card. If you are not satisfied with the auto setting, you can optimize it manually.

Auto color:
This function will optimize the color of the faytech displays. You can always change the color of the display manually.

Brightness:
This allows you to increase or decrease the brightness of the faytech display.

Contrast:
This allows you to increase or decrease the contrast of your display.

© faytech Ltd. 2009

Color temperature:
You can choose predefined color settings (cool, warm, medium, SRGB) or make your own color setting (User).

Saturation: (Only in AV mode)
Press VOL+ to increase the color purity (more colorful). Press VOL- to decrease the color purity (less colorful) .

Hue: (Only in AV mode)
Press VOL+ to move to warmer colors. Press VOL- to move to cooler colors.

Exit:
Return to the main menu or submenu.

.

•**Picture settings: (not available in AV mode)**

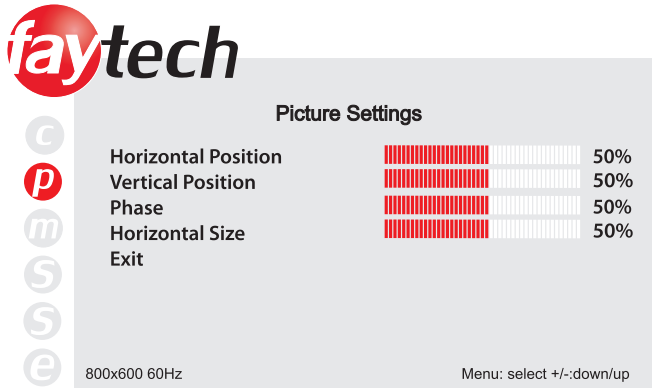

Horizontal position:
Move the position of the image on the display to the left (VOL-) or the right (VOL +).

Vertical position:
Move the position of the image on the display down (VOL+) or up (VOL-).

Phase:
Change visual distortion when viewing the screen from different angles. Use VOL+/ - to find the best display effect.

Horizontal size:
To reduce (VOL-) or enlarge (VOL+) the horizontal size of the image on the faytech display.

Exit:
Return to the main menu or submenu.

•Menu settings

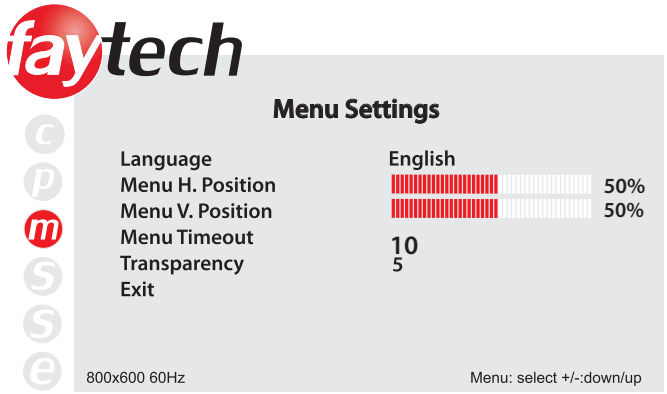

Language:
To change the language of the menu.

Menu H. Position:
To move the position of the menu to the left (VOL-) or the right (VOL+).

Menu V. Position:
To move the position of the menu up (VOL-) or down (VOL+).

Menu Timeout:
Determines how many seconds the OSD menu is displayed before it is

© faytech Ltd. 2009

automatically switched off, if there are no more operations. You can also select “off” to remove the OSD menu from the screen.

Transparency:
You can choose various levels of transparency for the OSD-Menu.

Exit:
Return to the main menu or submenu.

•Sound settings

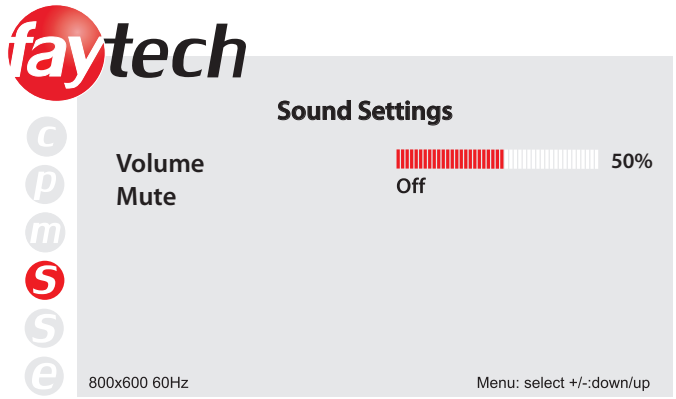

Volume:
To adjust the volume of the built-in speakers. Use VOL - to reduce the volume and use VOL+ to increase it.

Mute:
Turn the speakers on /off.

Exit:
Return to the main menu or submenu.

Display Operation

• **Settings**

Reset:

This option will return the display back to the factory settings. All changes you have made are deleted.

•Exit:

Return to the main menu or submenu.

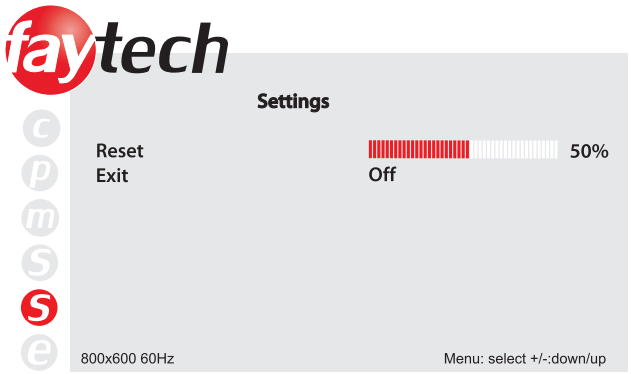

•**Exit**

To quit the OSD-Menu.

© faytech Ltd. 2009

Installation of the Touch-Driver under Windows

(Just for a touch display. You do not have a touch display unless there was a USB cable, a Driver CD and a touch pen included in the package.)

1. Put the CD into your CD- ROM.

2.If the installation menu does not start automatically, please select the file setup.htm from the main folder on the CD. Alternatively you can use Explorer on the CD and select the appropriate subdirectory to open the installation file setup.exe directly. Now you will see the following window:

Select the Windows driver 2000/XP/Vista/Windows7 in the upper right. If a security warning pops up, click “Run”, “Continue” or "Execute". Under Vista you must confirm the User Account Control with "Continue". Some further warnings may be given depending on installed security programs. Always click the button to continue the operation.

To complete the installation with all default options, click “Next” on each of the following dialog boxes. You can cancel at any time. To switch back to a previous step, click the “<back” button.

Please note! The installation process is in English. Later on you can choose the language for the OSD.

3.**"Welcome to the InstallShield Wizard for TouchKit":**Press "Next" if you to continue the installation.It's advisable to close all other programs before beginning this installation.

4.**"Setup Type"**:Check the box (see the picture on the next page upper left) only if you want to install the PS/2-Driver. Usually for a USB-touch display, you should NOT select this option. The PS/2-Driver works smoothly with a PS / 2

mouse but if you do not have a PS / 2 mouse you should leave this box unchecked to avoid compatibility problems.

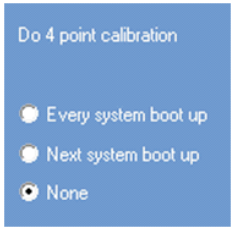

5.**"Setup Type"**:We recommend "None" (see the picture upper right) for the calibration setting. A calibration will be performed every time your PC starts up if you choose "Every system boot up". If you choose "Next system boot up" a calibration will be performed on the next system reboot. You can carry out a calibration at any time after the TouchKit program is installed. (See "Setting up the faytech Touch software".) After making your selection on this screen, click "Next".

6.**"TouchKit - InstallShield Wizard"**: Connect the USB cable now and press "OK". If the "New Hardware Found" dialog of Windows opens, please cancel it.

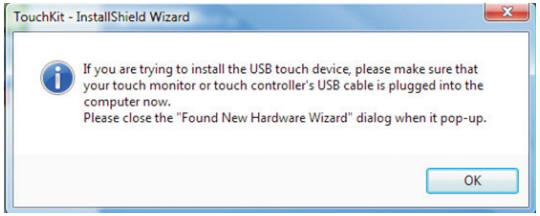

7. **"Setup Type"**: If you plan to use multiple monitors, please choose this box. (See "Setting up the faytech Touch software".)

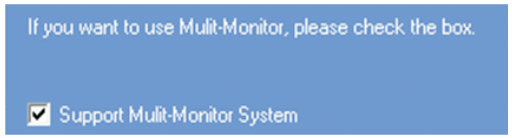

8.**"Choose Destination Location"**: Accept the default destination or choose your own then press "Next".

© faytech Ltd. 2009

Installation of the Touch-Driver under Windows

9. "**Select Program Folder**": Give the program a name or use the default setting and press "Next".

10."**Setup Status**": The installation will be started automatically with the selected settings.

11.The installation is successfully completed when the following window appears:

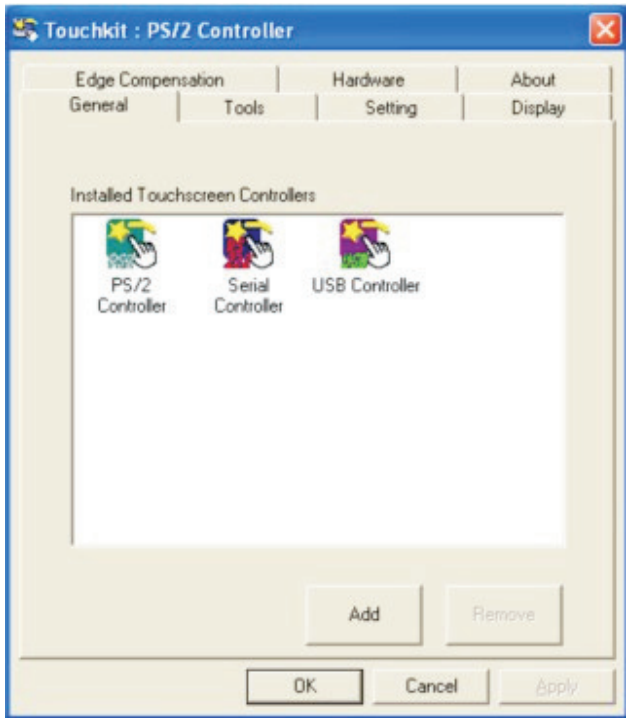

If the USB controller icon is not showing, please disconnect the USB cable from your PC and connect it again. For more help, Please go to the "Troubleshooting" section.

Setting up the faytech Touch software

Start the administration program by going to “Start - Programs -TouchKit – Configure Utility”. (If you accepted all the defaults the program may be at “Start – Programs – Accessories – Touchkit – Configure Utility”.) Or you can find this program in the system tray section of your task bar.

1.General tab

Gives information on whether one or more touch controllers are found and installed.

After the initial installation, if no touch controller shows up on this tab, please pull out the USB connector on your PC and connect the device again.

2. Setting tab

When you touch the touch panel there is a beep if you select the first checkbox. You can change the frequency and duration of the beep. The changes will be saved after you click on "OK".

Under **linearization**, you can choose the number of linearization points under the **Tools - linearization setting**. On a 25-point linearization the deviation of a touched point will be less than on a 9-point linearization. In general, the faytech displays have been set correctly and should not be linearized.

Double Click Time. You can set how fast you need to click on the same object to make a double click. If you choose **Shorter <<**, then you need to tap faster. If you choose **>> Longer**, then you can tap the screen more slowly..

The same applies to **Double Click Area**. If you choose **Smaller <<**, your taps must be in a relatively small area in order for a double click to be recognized. **>> Larger** enables you to make a successful double- click within a larger area.

© faytech Ltd. 2009

Setting up the faytech Touch software

To the right of the mouse icon are options to set different mouse-like modes. Normal mode offers the most intuitive touch-operation.

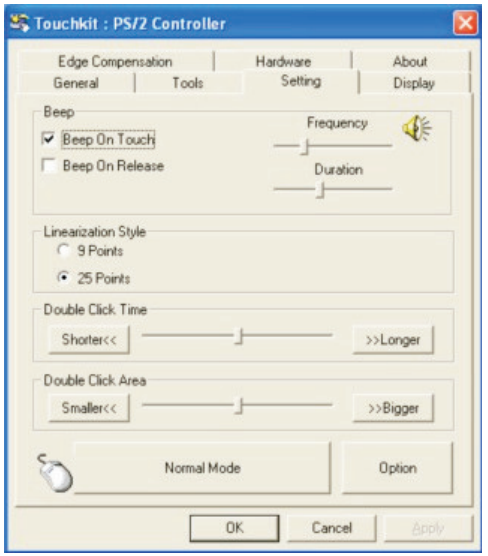

Normal-Mode: Allows the user to select an object or drag an object with the touch pen or a finger. This is the best mode to use for most applications.

Click on touch: The “click” is recognized when the screen is touched. To initiate a new mouse-click, the display must be released and re-pressed.

Click on release: Contrary to the click **function in touch**, it is generated a click when the display is released.

Click on touch without moving cursor: The first touch point generates a click. The cursor follows the finger / pen movement. For a better understanding of this setting, try it with the **Draw Test** application under the **Tools** tab.

Click on release without moving cursor: The cursor does not move to the touch position except at the lift-off point. For a better understanding of this

setting, try it with the Draw Test application under the Tools tab.

On the far right of the mouse icon, there is an **Option** button. The following options are available for the faytech display in this submenu:

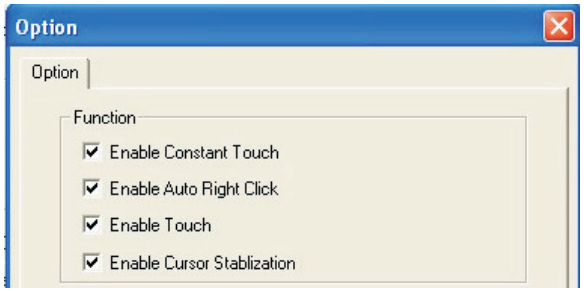

- **Enable Constant Touch:** is the function to check to enable the driver to determine if the most recent touched position is the same as the previously touched point. If the difference is smaller than the defined area, the driver does not generate any mouse movement which helps reduce system load.

- **Enable Auto Right Click:** If the touch screen is touched for a specified time, the driver will generate a mouse right button click if this function is enabled.

- **Enable Touch:** Be careful! If you don't check this box, the touch function will not work!

- **Enable Cursor Stablization:** A software filter exists inside the driver to filter some noise to stabilize and smooth the touch points. When activated, the user will experience a more stable cursor.

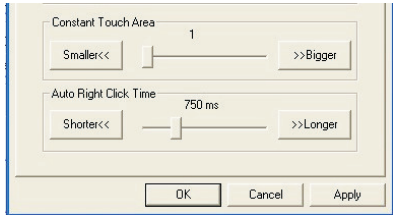

© faytech Ltd. 2009

Setting up the faytech Touch software

You can adjust the parameter for the **Constant Touch Area** function. This is a criterion to judge if the most recent touched point is the same as the previously touched point. If the difference between the two points is within this area, it will be recognized as the same touch point and the driver does not generate a new mouse event for this touch point.

You can adjust the **Auto Right Click Time** function. If the touch screen is touched and held for this period of time, the driver generates a right mouse click.

3.Tools tab**:**

You can adjust the faytech touch panel calibration with the functions called **4 Points Calibration**, **Clear and Calibrate**, **Linearization** and **Draw Test.** Start by performing the 4 points calibration. By using the application drawing test, you can test the touch panel to determine if further setting changes are desirable.

When you press the 4 Points Calibration button, the surface of the monitor shows the following image:

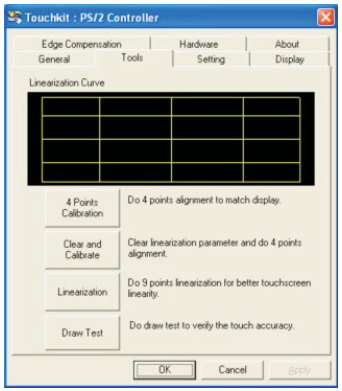



Touch and hold each of the blinking X symbols in the calibration window until it stops blinking to make sure that the utility can gather enough data for computation. In addition, a progress bar is shown at the bottom of the window

to indicate time elapsed. If the touch screen is not touched before the progress bar gets to the far right, the calibration task will be terminated automatically.

The **Clear and Calibrate** button will clear all calibration and linearization settings. It will then automatically take you through a 4 Points Calibration.

The **Linearization** (25 or 9 points calibration) function is used to compensate the touch screen linearity. It will require you to press and hold on 9 or 25 targets on the screen so it can compensate for the curvature (if any) of the display. After linearization is completed, the linearity of the touch screen will be shown in the Linearity curve window.

The **Draw Test** function is used for accuracy and performance checking. Press this button and a new pop up window will be popped up on the monitor (see below). Touch or drag your touch pen or finger on this grid to gauge the effectiveness of the settings and calibrations that you have made. If you are using your finger, you may have to press firmly to draw continuous lines. Press the Clear button to clear the window. Press the Quit button to terminate this draw test.

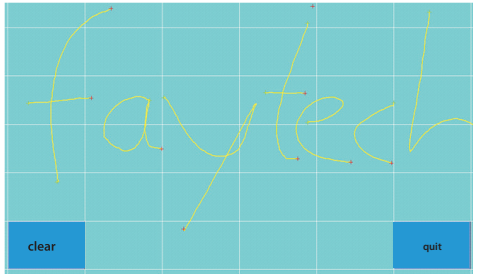

4.Display-Multi-Monitor **Setting** tab:

If you selected “Support Multi-Monitor System” when you installed the Touch driver, you will see a Display tab when you run the Touchkit Configure utility. If you did not select this option, you will not see a Display tab.

You can have up to four faytech touch-screens connected simultaneously. You

© faytech Ltd. 2009

can also use a (non-touch) display and a touch screen. In the example below, the touch-screen is display "1", while the second display "2" is a normal monitor. Both have the same resolution, but the touch screen is the primary monitor.

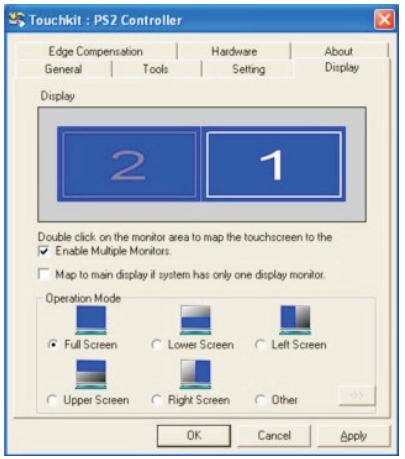

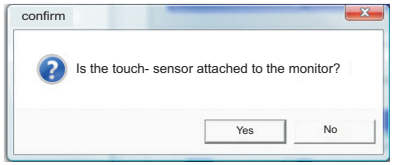

Enable multiple-monitors: When this function is disabled, the touch screen will be mapped to the primary monitor automatically. When this function is enabled, you can double click on the monitor area in the monitor geometry window to assign the monitor area where the touch screen will be mapped. Double-tap on the desired monitor and answer the question in the pop-up window with **Yes**.

After confirmation, your touches on the selected touch monitor will be simulated as mouse clicks.

If the function "**The touch sensor is automatically connected to the main system**" is activated, the program automatically puts the touch function on the primary monitor, if only one monitor is connected.

The **Operation mode** settings allow you to set the size of the touch area on your faytech touch-screen. E.g. if you select the "right screen“, after a new calibration only the right side of the monitor will work as a touch area. If you select "other" and then click on the ->> button, you can set more modes or set

up an individually touch-defined area.

5. Edge Compensation tab: fine adjustment of the touch area

On this tab you can finely adjust the touch area. This is very useful when you have problems touching at the edges of the touch screen. In the following image you can see that the limits for all edges of the screen were corrected (to 110%). E.g. if you have problems in the upper right area, just increase the upper and right limit (**>> Bigger**). Confirm the change and try the new settings with the **Draw Test**. You can also use the X-axis and Y-axis displacement options to compensate if your touch always seems to be off the same amount in the X and/or Y directions.

The "**Support Edge Compensation**" option optimizes the touch detection in the corners of your faytech touch panels. This option should always be enabled.

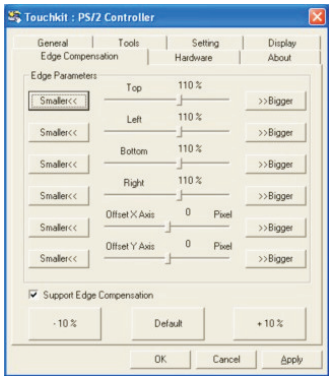

6. Hardware and About tabs:

The last two tabs are for information only - there are no options to select on these tabs.

The **Hardware** tab gives information about the design of the faytech touch display and the firmware used.

© faytech Ltd. 2009

Setting up the faytech Touch software

The **About** tab gives information about the touch driver version as well as information about the developer of the software.

7. Touchkit program in the taskbar

With the Touch Kit icon in the taskbar, you can use a right mouse click to make quick changes in many of the Touch Kit settings. The individual functions have already been described in this chapter.

On the context menu, if you select the option **Display Button**, you will see a mouse animation displayed in the lower right half of the screen. The red mark indicates which mouse button will be simulated the next time you touch the screen. By clicking on the left or right pointer of the animation you change the behavior of the touch panel accordingly.

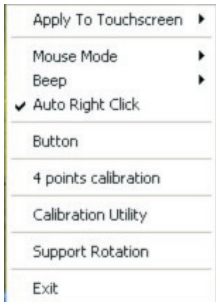

Troubleshooting

If you are having trouble getting your touch monitor to work correctly, please look through this list of common problems:

Physical Setup:

●Cable connections. Care should be taken when connecting the cables. Make sure the cables are connected to the right connectors at each end and make sure the cables are attached firmly to their respective connectors. Lack

of an image or poor quality images are often caused by the wrong connection. Turn off the display and check each pin of the cable separately. If you think you have a defective cable, we are happy to exchange it for you - you do not have to send the display back.

- Avoid short circuits! Please be careful before connecting power to the display that there are no cables that have not yet been connected at both ends. If the monitor does not power up, try another outlet or another power source.
- Provide the display with a 12V DC power supply only. Higher or lower voltage can permanently damage the display and is not covered under warranty. Also make sure you supply only one power source.

Startup:

Please note: After you switch the display on, you may have to change the input mode (VGA/AV1/AV2) in order to receive a signal. If there is no signal source connected, the display will show "no signal" and go off automatically after a short period of time.

1. Display remains black

- Connection error: Please check again to make sure that all cables are properly connected.
- Resolution / activation errors: Using the right resolution and activating the display is a common problem that is often not the fault of the display itself. The monitor supports the resolutions given in the technical data. Sometimes during simultaneous operation of two displays on a PC or the connection of an additional display to a notebook complications can arise. Usually these problems need to be resolved in the hardware and software of the PC. It is always best to use the display initially as a single display with a resolution of 800x600 at 60Hz. Try to start with this resolution then experiment with other resolutions and other combinations of displays to see which work best for you.

Please note that extended desktops often are black in the beginning. In this

© faytech Ltd. 2009

situation your display may be black at first if you configure it as an extended desktop.

> ***Tip:*** *It is often best to use the display at a resolution of 800x480, 800x600 or 1024x768 at 60Hz. If the display is used as a second display with a PC, which is already connected to a display with a much higher resolution, configure resolution profiles. With an ATI graphic card, you can set up profiles in the advanced catalyst control center under profiles. Activate a hotkey, so that you can change the profiles of each display (one is the touch display, the other is the higher resolution display). Also you can configure the profiles using a software tool such as powerstrip.*

- Power supply error: If the display has no signal input, there might be an error with the power supply. First please check the connection with another power supply before you return the display. We're happy to exchange the defective power supply if necessary.

2. Stripes / errors in the image

- Pixel error: Each faytech display has been thoroughly tested and sold with no pixel defects. If there is a pixel error at your display, please contact us for Support.
- Text is hard to read, picture looks fuzzy: If the display screen is focused and text looks good at resolutions of 800x480 and 800x600 at 60Hz, then the problem is probably due to the interpolation the display performs at higher resolutions. This can lead to inaccuracies in the representation and pixel vibrations. Best performance will come at resolutions of 800x480, 800x600 or 1024x768 at 60Hz.
- Stripes / errors in the image: When connecting the display using power from a PC's power supply, the power supply can cause a light flickering. This is because of the interference created by the PC's power supply. In order to improve the picture, please try an alternative power supply.

Technical Data

Technical advancements in the product may make some of these

Display with / without touch

Display case (cm)	18x12.5x2.5
Screen diagonal (inch/cm)	7/17.78
Display (cm)	15.5x9.1
Mounting frame (cm)	20.2x14.6x3.0
Mounting	pedestal (included) VESA-100 holes on back
Gross weight (including packaging, kg)	1.3
Net display weight (kg)	0.6
Aspect ratio	16:9
Physical resolution	800x480
Maximum showable resolution	1920x1200
Colours displayed	262,144
Brightness (cd/m2)	300
Contrast	500:1
Typical reaction time Tr; Tf (ms)	10,15
Visual angle horizontal; vertical (°)	140;120
Working power (V)	11.5-13
Power consumption (W)	12
Stand-By-Consumption (W)	1
Operating temperature (° C)	-20 to +50
Connectors, video	2x Video, 1x VGA
Connectors, audio	1x Audio-In, 1x Headset Out
Power-supply (included in delivery)	230V, 12V
Additional features	OSD-MenU, Loudspeaker, Touch-pen

Display with touch function

Touch-panel	4-wire resistive
Touch-connector	USB
Touch-panel-driver	Windows, Linux, Apple
Touch life (contacts)	> 10 000 000
Response time touch-panel (ms)	< 10
Surface hardness	3H
Input force (g)	20 ~ 150

Supported VGA Resolution

640x480, 60Hz	1440x900, 60Hz
800x480, 60Hz	1600x1200, 60Hz
800x600, 60Hz	1920x1080, 60Hz
1024x768, 60Hz	1920x1200, 60Hz
1280x720, 60Hz	720x576, 50Hz
1280x768, 60Hz	1280x720, 50Hz
1360x768, 60Hz	1920x1080, 50Hz

You can download the powerstrip timing parameter software at www.faytech.cn (program download at http://entechtaiwan.net/util/ps.shtm)

© faytech Ltd. 2009

Kontaktdaten, RMA-Bearbeitung

Support-Nummer: +49 211 9954 8956
Support-E-Mail: support@faytech.de
Hersteller-Internetseite: www.faytech.de

Europäisches Support- und Versandlager:
Faytech Display Support
Industriegebiet Kolkmannskamp 10 (Medienpark)
44879 Bochum

RMA-Bearbeitung
Wenden Sie sich bei einem mutmaßlichen Defekt bitte immer zunächst an uns. Unsere ausgebildeten Fachkräfte helfen Ihnen gerne weiter. Liegt tatsächlich ein Defekt vor erhalten Sie über support@faytech.de eine RMA-Nr. (Return Merchandise Authorization). Senden Sie das defekte Teil mit deutlicher Anbringung der RMA-Nr. an obige Adresse ein. Zubehörteile wie Kabel, Adapter oder Netzteile tauschen wir in der Regel unkompliziert vorab aus.

Bitte senden Sie die Ware immer frei an uns. Unfreie Ware (Kosten zahlt der Empfänger) nehmen wir nicht an. In den ersten 30 Tagen nach Erstkauf übernehmen wir sämtliche Transportkosten für Sie. Dafür senden wir ihnen per E-Mail mit der RMA-Nr. Einen Rücksendeschein zu. In der restlichen Garantiezeit tragen wir die Rücksendegebühren.

Contact, RMA service (in English):

Support-Number: +1 720 251 4158
Support-E-Mai: support@faytech.de
Home page: www.faytech.cn

U.S.A. Warehouse:
Faytech Display Support
13882 E. Grand Ave, Aurora, Co 80015, USA

RMA-service:

If you think your faytech product has a defect please always contact us directly. Our trained after sales service specialists can help you resolve your problems. Please check the manual and our frequently asked questions before contacting us – you will usually find an answer to your question.

If there is a defect you can request an RMA number (Return Merchandise Authorization) at support@faytech.de or via fax at +86-20-82803134 (Chinese fax-number). Please attach in the contact e-mail/fax your invoice and what problems you are experiencing. In reply, you will receive an e-mail/fax with your RMA number and additional information.

For accessories like cables, adaptors or power supplies which are not working, we can usually send you a replacement before receiving the damaged goods. For a defective product, we try to check and solve the problem within 3 days after receipt.

Make sure that shipping has been paid before sending goods back to us. We do not accept postage due packages at our service centers. Anything received with postage due will be returned to you without any testing or resolution. Within the first 30 days after you buy a new faytech product, we will refund your shipping costs for returned products. For the rest of the warranty period, we will pay the shipping costs for any repaired or replaced items that we ship back to you.